

Isuzu Industrial Diesel Engine Serial Number Location

Isuzu Model Designation	Serial Number Location
3CB1 3CD1	Left side, lower center of block between front engine mount and starter.
3YA1 3YC1	Right side of block above injection pump.
2KC1 3KC1 3KR1	Right front, on injection pump mounting flange.
2AB1 3AB1	Right front, top part of block.
3LA1 3LB1 3LD1 / 2 4LB1 4LC1 4LE1 / 2	Right front, top part of cylinder block. Between the first injection pump and front cover.
C240	Left front, top part of cylinder block.
4JA1 4JB1 4JC1 4JG1 / 2	Left rear, top part of cylinder block.
4BB1 4BD1 4BG1	Left front, top part of cylinder block.
6BB1 6BD1 6BF1 6BG1	Left front, lower part of cylinder block.
6HK1	Right front, top part of cylinder block below number one exhaust port.
6SA1	Left rear, top part of cylinder block.
6SD1	Left center, lower part of cylinder block.
E120	Right side of cylinder block, below injection pump and to the rear of the filter.
6RB1	
6WG1	Left front, top part of cylinder block in front of injection pump.

Note: All directions are as viewed from the flywheel end of the engine. All serial numbers are stamped and consist of six numerical digits. Engine Model is cast on the side of the block or located on ID tag, which is found on the valve cover.